
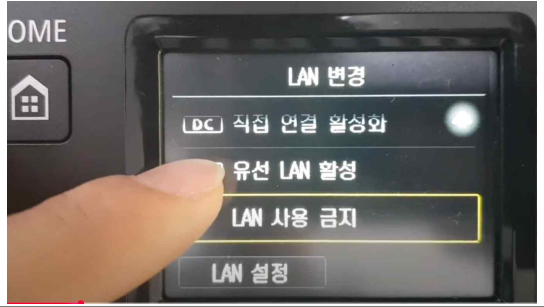
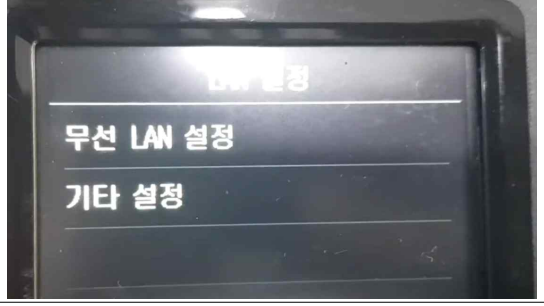

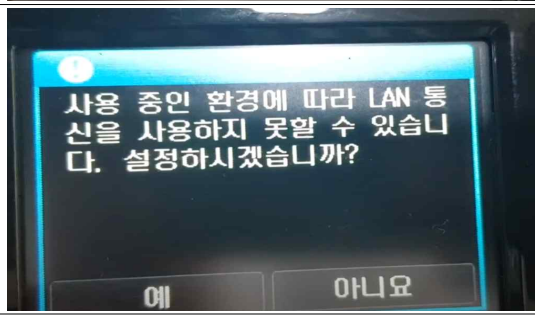

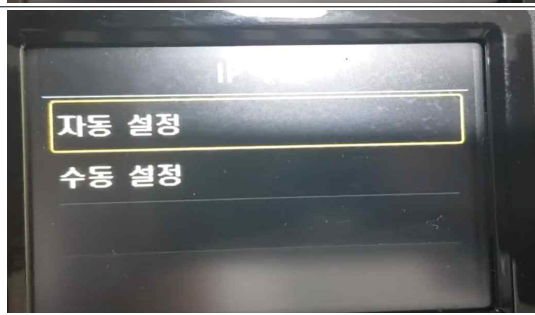
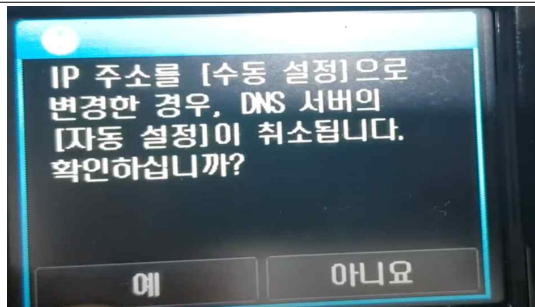



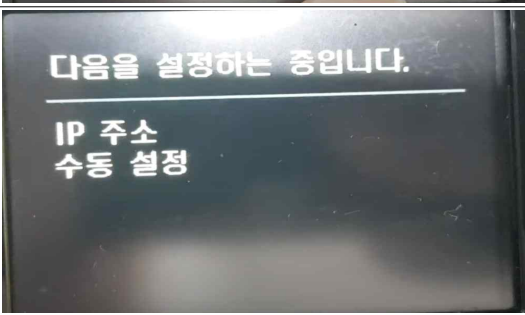
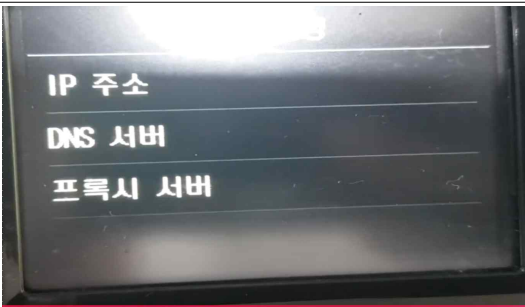


<p>1. LAN</p>	
<p>2. 유선 LAN 활성화</p>	
<p>3. LAN 설정</p>	
<p>4. 기타설정</p>	
<p>5. TCP/IP 설정</p>	

6. IPv4	 <p>TCP/IP 설정</p> <p>IPv4</p> <p>IPv6</p>
7. 예	 <p>사용 중인 환경에 따라 LAN 통신을 사용하지 못할 수 있습니다. 설정하시겠습니까?</p> <p>예 아니요</p>
8. IP 주소	 <p>IPv4</p> <p>IP 주소</p> <p>DNS 서버</p> <p>프록시 서버</p>
9. 수동설정	 <p>IPv4</p> <p>자동 설정</p> <p>수동 설정</p>
10. 예	 <p>IP 주소를 [수동 설정]으로 변경한 경우, DNS 서버의 [자동 설정]이 취소됩니다. 확인하십니까?</p> <p>예 아니요</p>

11. OK	 <p>IP 주소 입력 유효 값: 0-255 x 4의 값 192 . 168 . 000 . 002 OK</p>
12. OK	 <p>서브넷 마스크 입력 유효 값: 0-255 x 4의 값 255 . 255 . 255 . 000 OK</p>
13. OK	 <p>기본 게이트웨이 입력 유효 값: 0-255 x 4의 값 192 . 168 . 000 . 001 OK</p>
14. 기다림	 <p>다음을 설정하는 중입니다. IP 주소 수동 설정</p>
15. 홈버튼을 누름	 <p>IP 주소 DNS 서버 프록시 서버</p>